

# PMDX-407

## Controlling spindle direction (Forward/Reverse) with the PMDX-407

The [PMDX-407](#) has a single pair of solid-state switch contacts that can be used to turn the spindle on or off. The switch contacts close when the spindle should be running, and they open when the spindle should stop.

In order to have the PMDX-407 control the spindle direction you will need an additional SPDT relay, such as the one on the [PMDX-422](#), [PMDX-416](#) or [PMDX-424](#), all of which the PMDX-407 can plug directly in to. If you are using the PMDX-407-S (the stand-alone version NOT plugged into a PMDX-SmartBOB), the additional relay can be the relay on the [PMDX-122](#) or the SPDT relay on the [PMDX-126](#).

Here is how to wire the PMDX-407 and the SPDT relay (see the image at the bottom of this FAQ for an example with a PMDX-416 and a PMDX-407):


- The Com on J2 of the PMDX-407 should connect to the Common of your VFD interface. If you have the VFD working now, you have already done this.
- The Run on J2 of the PMDX-407 should connect to the relay Com on J8 of the PMDX-422 or PMDX-416, J18 of the PMDX-424, or the Com terminal of any break-out board with a relay or any external relay that you may add to a board that does not have one.
- Connect the relay's N/C (normally closed) contact to the FWD input on your VFD.
- Connect the relay's N/O (normally open) contact to the REV input on your VFD.
- If you are using an external relay (other than the relay on a SmartBOB), then connect an output signal from your breakout board to the relay's coil (WARNING: DEPENDING ON THE RELAY YOU MAY NEED ADDITIONAL ELECTRONICS BETWEEN YOUR BREAKOUT BOARD AND THE RELAY'S COIL - that is beyond the scope of this FAQ).

Now configure Mach4 to use the "Spindle Rev" output signal to control the relay. You will find this near the bottom of the list of signals here:

Configure -> Mach -> Output Signals

- The Enable column should have a green check mark.
- The Device column should be set for your SmartBOB device.
- The Output Name column should be set to Relay (or other pin name if you happen to be using an external relay that you have added). The output name Relay will not appear in the list if you have any other output set to use that output name.
- The Active Low column should have a red X unless you have the FWD and REV swapped in your wiring.
- There is no need to configure the Spindle Fwd or Spindle On signals. The SmartBOB plugin is receiving these signals directly from the Mach4 software API.

# PMDX-407

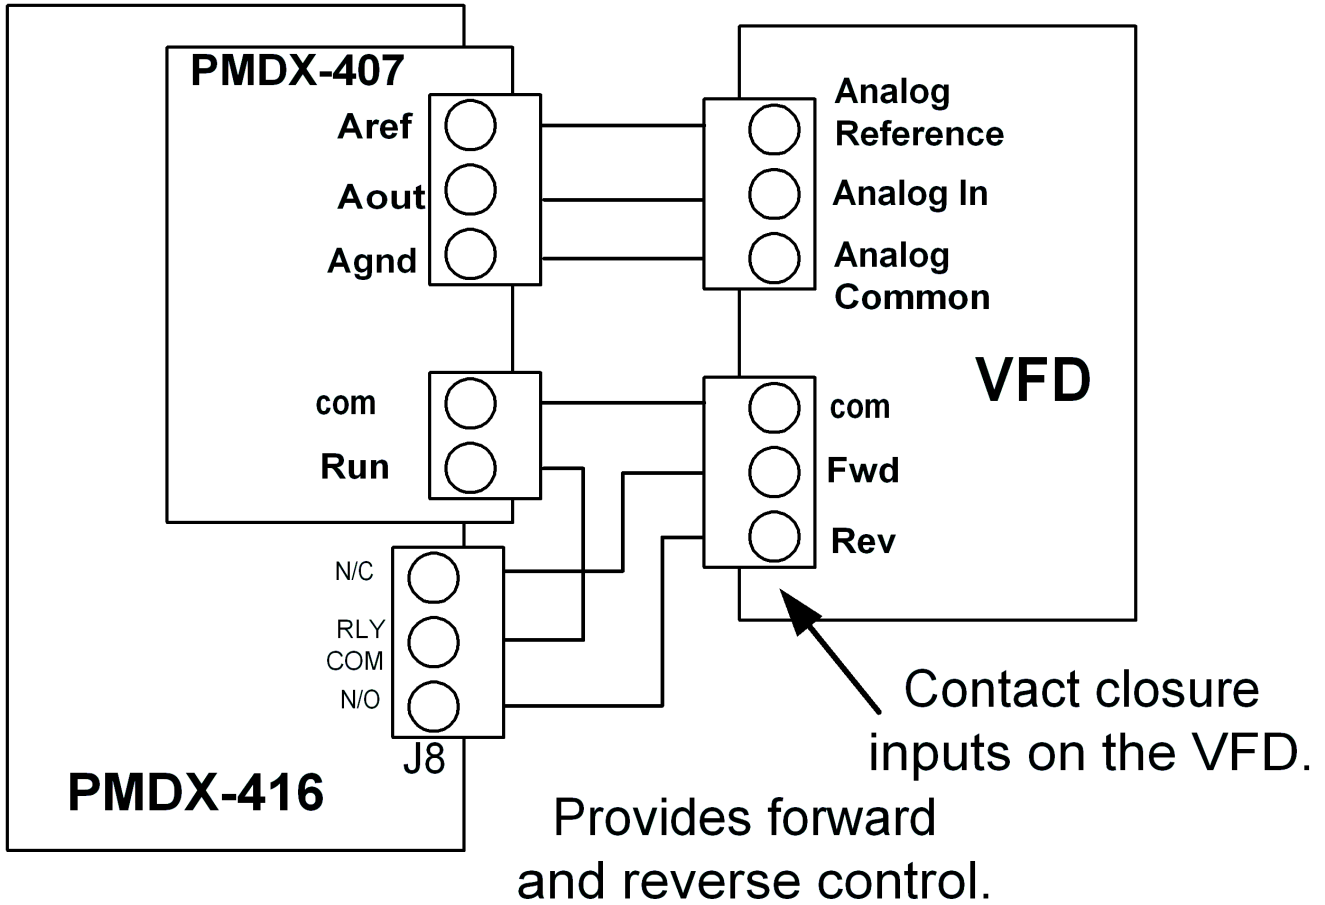

Unique solution ID: #1011  
Author: Bob  
Last update: 2016-12-08 03:40